

Operating Instructions for the Control Units for Vibratory Drives

ESK 2000

BA

Rhein-Nadel Automation GmbH

Table of contents

Chapt.....	Page
1 Technical datas.....	3
2 Safety notes.....	4
3 Commissioning instructions	4
4 Operation	8
5 Dimensional drawing.....	15
6 Connection diagram.....	16



Declaration of conformity
as defined by
Low voltage directive 2014/35/EU
and EMC directive 2014/30/EU

Herewith we declare that the product complies with the following provisions:

Low voltage directive 2014/35/EU
EMC directive 2014/30/EU

applied harmonized standards:

DIN EN 60204 T1
EN 61439-1

remarks:

Rhein-Nadel-Automation

Managing Director
Jack Grevenstein



1.1 Performance Characteristics

This compact control unit has been designed to operate a bowl or linear feeder.

The unit has the following performance characteristics:

- one power output:
 - bowl or linear feeder < 10 A
- two sensor amplifiers with independently adjustable time levels (on/off).
- 24V DC remote control input.
- two relay outputs and two optocouplers for status messages and further links.
- a membrane keyboard for setting and editing the operating values (parameters) in the setting menus.
- plug connections for
 - bowl or linear feeder
 - sensors
 - communication
- double-pole mains power switch

1.2 EC Conformity/CSA Conformity

The control device corresponds to the following regulations:

Low voltage directive 2014/35/EU

EMC directive 2014/30/EU

Applied harmonized standards:

DIN EN 60204 T1

EN 61439-1

The control device corresponds also to the UL/CSA regulations.

1.3 Technical Data

Mains voltage:	230 Volt AC, 50/60 Hz, +20 / -15% 110 Volt AC, 50/60 Hz, +10 / -10%
Output voltage:	0 ... 208 V _{eff} / 230 VAC ; 0 ... 98V _{eff} / 110VAC
Load current:	10 A _{eff}
Minimum load current:	80 mA
Internal fuse:	F1 = 10A
Soft start time, soft stop time	0 ... 5 sec., can be selected separately
External setpoint:	0 ... 10V DC
Sensor inputs:	2
Remote control input:	24V DC (10-24 VDC)
Sensor power supply:	24V DC, max. 60 mA (per sensor input)
Sensor delay ON:	0 ... 60 sec. separately adjustable
Sensor delay OFF:	0 ... 60 sec. separately adjustable
Outputs:	2 relays / 2 normally open contacts voltage-controlled potential-free change-over contact
Status output (optocoupler):	max. 30V DC 10mA
Relay contacts:	max. 6A 250V AC
Operating temperature:	0 ... 50° C
Type of protection:	IP 54

1.4 Accessoires

Label	Denomination	RNA-Mat-code
XS1	Connector	31002323
XS3	Coupler connector, 5-poles, straight	35051144
XS3	Coupler connector, 5-poles, angular	35002546
XS4	Coupler connector, 7-poles, straight	35051153
XS4	Coupler connector, 7-poles, angular	35002545

2 Safety Instructions

It is always necessary to read and understand the safety instructions. This ensures that valuable material is not damaged and injuries are avoided.

Steps must be taken to ensure that all persons working with this control unit are familiar with the safety regulations and observe them.

The device described in this manual is a control unit for operating RNA bowl feeders and linear feeders. The limit values specified in the technical data must be observed.



Note!

This hand indicates tips on operation of the control unit.



Attention!

This warning triangle indicates safety instructions. Failure to heed this warning can lead to severe injuries or death!



Work on electrical equipment of the machine/plant may be carried out only by a trained electrician or by untrained persons under the leadership and supervision of a trained electrician in accordance with the regulations for electrical engineering!

All safety and danger signs on the machine/plant must be observed!

The electrical equipment of a machine/plant must be inspected and checked regularly. Defects such as loose connections or damaged cables must be remedied immediately!



Before commencing operation, make sure that the earthing line (power earth, PE) is intact and installed at the connecting point. Only test instruments approved for this purpose may be used for checking the safety grounding conductor.

3 Commissioning Instructions



Before connecting up to the mains and switching on the control unit, it is essential to check the following points:

- Is the control unit in proper working condition and closed with all screws?
 - Are the connector locks clicked in/screwed secure?
 - Are all cables and glands intact?
 - Is PROPER INTENDED USAGE ensured?
 - Does the mains voltage specification on the control unit agree with the local mains voltage?
 - Does the mains frequency specification on the vibratory drive agree with the local mains?
 - Is the correct operating mode set on the control unit? (See "Operating Mode" section)
-

Operation of the control unit may be commenced only when all questions asked above can be answered unambiguously with YES.



Before you start operation after repair work has been carried out or control units/vibrating drives have been exchanged, set the output on the control unit to minimum before switching on. Check that the system is working properly when you increase the output.

3.1 OPERATING MODE

Bowl feeder frequency coding in connector.

Operating mode 2


With bridge: 100 / 120Hz

Without bridge: 6000 / 7200 oscillations/min

Operating mode 1

Without bridge: 50 / 60Hz



Without bridge: 3000 / 3600 oscillations/min

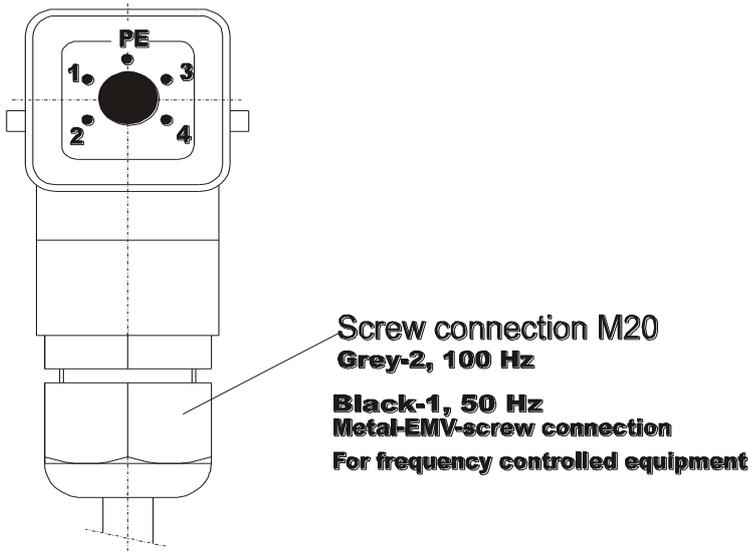


3.2 Sensor Inputs and Sensor Links


The control unit has two built-in sensor inputs. They can be used for checking the back pressure, the level, for cycle control and other monitoring functions. The following basic rules apply:

Sensor input 1 acts on channel 1, in case nothing else has been programmed in menu C006. Sensor input 2 has been provided for additional functions. See sensor links. The sensor inputs can only be evaluated when they are activated and coded in C004, C005. See the connecting diagram for the sensor connections (XS3 plug connection).

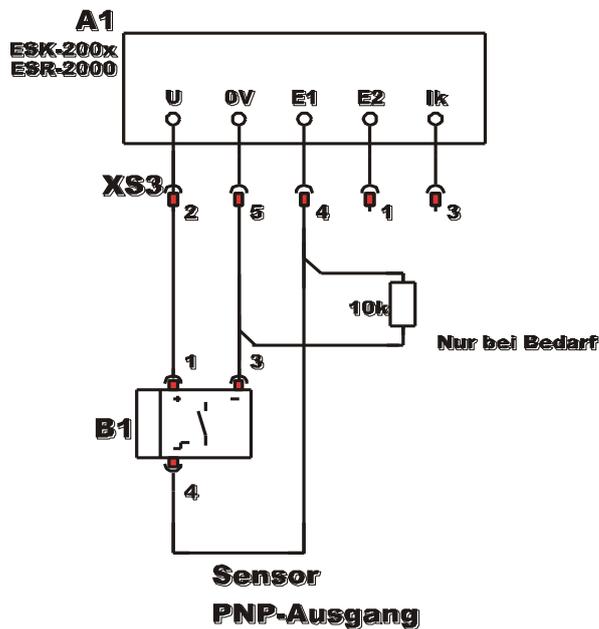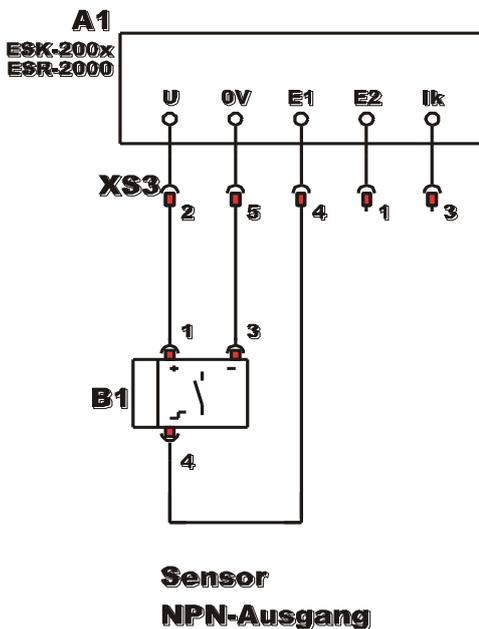

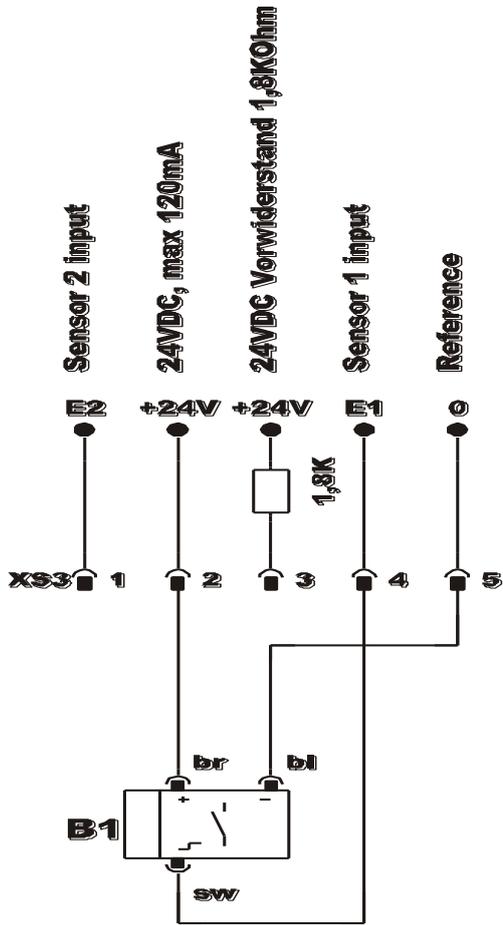


**proximity switch
normal**

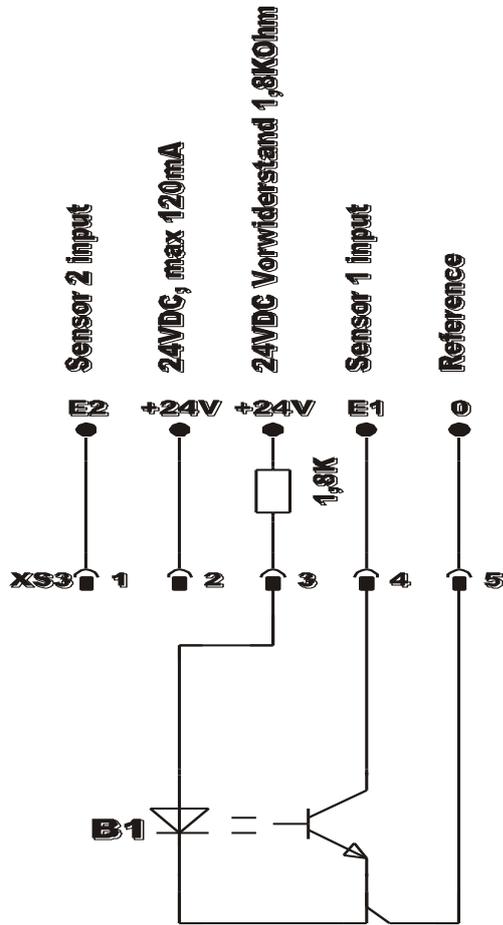


**optically sensor
without amplifier**

Fig.: Connecting diagram for direct sensors

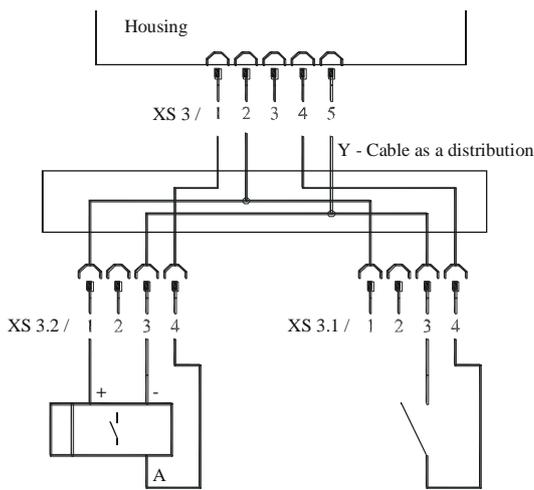

Termination of a sensor and a contact by adapter.

Fig.: Connecting diagram for photocell without amplifier on the 2-way distributor

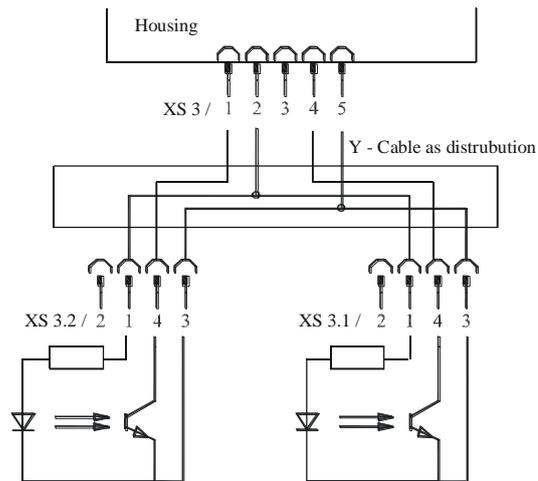

Amplifierless photocell with external resistor 1.8 kOhms, 0.25W resistor soldered into plug.

Fig.: Connecting diagram for sensors on 2-way distributor

3.3 Status Outputs and Relays

The status outputs are used for remote diagnostics of the control unit operating mode or for linking several control units together. They are unassigned NPN-doped transistor routes and are potential-free.

The transistor route is always connected at the **STANDBY** status output when the control unit is connected to the mains and switched on with the mains power switch.

The **ON ACTION** status output requires the same conditions as **STANDBY**. Channel 1 must also be active as the transistor will block if it is set to **BACK PRESSURE**, **OFF** or **STOP**. The status outlet and the remote control should be wired via the XS4 plug connection.

The two relays have different functions. K1 works as a status relay parallel to the **ON ACTION** back pressure output. K2 is either used for the delayed switch-off of blow-off air or for a cycle control function for one of the two sensor channels.

The connections and the cable inlets are on the right-hand side of the control unit. The terminal strip is behind the control unit panel.

4. Operation

4.1 General



Control unit plug connections


<u>Mains power switch</u>	The control unit is isolated from the mains with a double-pole switch.
<u>XS 3</u>	Plug connector for sensors
<u>Channel 1</u>	Plug connector for bowl feeder or linear feeder (< 10A)
<u>XS 4</u>	Plug connector for optocoupler outputs and remote control input

The control unit display (membrane keyboard)

	<u>On/off</u> This key switches all connected devices off. "OFF" will appear in the display. The control unit is still ready for operation.
	<u>Cursor up and cursor down</u> Use these keys to page through the control unit menu or to set parameters.
	<u>Enter</u> Use this key to confirm the parameters entered with the cursor.
	<u>Decimal point in display</u> If the decimal point is not flashing, you cannot make an entry.
	If the decimal point is flashing, you can make an entry.

4.2 Switching on the Control Unit

Switch on the control unit with the mains power switch. The main menu will appear in the display showing the last set-point set in channel 1 (Bowl feeder or linear feeder feed rate).



The following displays may also appear depending on the circuit state of the unit.



The remote control has been activated but is currently not available on the unit.



The unit has been switched off with the upper left-hand key on the membrane keyboard, all functions are blocked.



The back pressure monitoring sensor has been assigned thus switching off the bowl feeder (low priority).

4.3 Main Menu/Setting and Displaying Setpoints for Channel 1

**Display of setpoint or output
(Bowl feeder)**
**Alternatively: STOP, OFF or BACK
 PRESSURE**
 (see above)



No entries possible



**Enter code to change or make re-
 quired settings.**



Enter code.
 See section 4.4 for de-
 scription of code.



**Setpoint preset
(Bowl feeder or linear feeder)**



**Entry in %; return to
 display mode to store**



From these three basic displays you can page through the main menu using the cursor keys (UP/DOWN). Press the ENTER key in the main menu to activate a menu item for setting or adjustment. The decimal point will flash once you have pressed the ENTER key. Changes can now be made using the cursor keys (UP/DOWN). Confirm the entries by pressing the ENTER key again. The decimal point will no longer flash. You can scroll further through the menu using the cursor keys. This procedure is also used in the code menus described below.

All displays shown in the following section represent the factory settings. If the actual display on the control unit differs, the factory setting has been changed in the individual codes for a specific application.

4.4 Description of the Individual Codes for Programming the Control Unit

KANAL1
KANAL2
CODE ..C.001

Settings for channel 1

The following functions can be set or limited for channel 1 in this submenu:

- vibration amplitude
- signal direction of the remote control
- remote control
- soft start time and soft stop time

KANAL1
KANAL2
CODE ..C.003

Lock setpoint

This submenu allows the setpoints (oscillation amplitude) to be blocked in the main menu. The setpoints for channel 1 can no longer be changed in the main menu. This prevents the output values being accidentally changed. Changes can only be made using code C001.

KANAL1
KANAL2
CODE ..C.004

Setting sensor input 1

Sensor input 1 is activated in this submenu. The following functions can also be set.

- invert input signal direction
- time before switch-on
- time before switch-off

KANAL1
KANAL2
CODE ..C.005

Setting sensor input 2

Sensor input 2 is activated in this submenu. The following functions can also be set.

- invert input signal direction
- time before switch-on
- time before switch-off

KANAL1
KANAL2
CODE ..C.006

Selecting the sensor links

The sensors activated with codes C004 and C005 can be linked to each other in this submenu.

KANAL1
KANAL2
CODE ..C.008

Setting the cycle control system

Set the sensor input to be monitored and how the control will react when there is a fault.

KANAL1
KANAL2
CODE ..C.009

Display status

This submenu is used to check the set vibration frequency and the sensor inputs.

KANAL1
KANAL2
CODE ..C.010

To call software version

Determinat. 411. 59. 10. 23.11.99

date
version -no.
type
internal no.

type:
59 = ESK 2001
58 = ESG 2001
57 = ESK 2000
56 = ESG 2000

KANAL1
KANAL2
CODE ..C.100

Output preset with an external voltage

KANAL1
KANAL2
CODE ..C.143

Store parameters

If the values (user parameters) previously set in the different submenus are to be stored, call this submenu.

KANAL1
KANAL2
CODE ..C.200

Block all setting functions

This code blocks all entry options on the control unit. The values can no longer be changed. The menu can now only be enabled using this code.

KANAL1
KANAL2
CODE ..C.210

Reset parameters

This submenu allows the user to reset the control unit to the factory settings. If user parameters have been stored, the control unit can also be set to these settings.

4.5 Application-specific Changes to the Factory Settings

4.5.1 Code C001 power output

Aim: Setting and limiting the vibration amplitude, the remote control, the soft start time and the soft stop time.

Select code			Set code	
Code C001				
Set vibration amplitude			0 - 100 %	
Limit vibration amplitude			50 - 100 % (*)	
Remote control			1 = active 0 = inactive	
Remote control signal direction			1 = start = 24V DC 0 = stop = 24V DC	
Soft start time			0 - 5 sec.	
Soft stop time			0 - 5 sec.	
Return			Store and return to main menu	

* RNA-Feeder with 200 V = 90 %

4.5.2 Code C003 Lock Setpoint

Aim: Blocking the setpoints in the main menu. The values can no longer be changed directly. Changes can only be made using code C001.

Select code			Set code	
Code C003				
Setpoint (vibration amplitude)			1 = can be set 0 = entry blocked	
Return			Store and return to main menu	

4.5.3 Code C004 Sensor Input 1 and Code C005 Sensor Input 2

Aim: Activating and setting the sensor inputs


Select code			Set code	
Code C004				
Sensor 1 input			1 = active 0 = inactive	
Invert input signal direction			1 = start = 24V DC 0 = stop = 24V DC	
Sensor state delay FREE, time before switch on.			0 - 60 sec.	
Sensor state delay ASSIGNED, time before switch-off.			0 - 60 sec.	
Return			Store and return to main menu	

Code C005 is used for sensor input 2 in the same way.

4.5.4 Code C006 Sensor Links

Aim: Linking two previously activated sensor inputs.

Select code



set code



Code C006



Only one of the eight sensor links can be set active.


And (And) link with blow-off of the outlet tracks



1 = active
0 = inactive





And (und) link without blow-off of the outlet tracks (since Versions-No. 10)



1 = active
0 = inactive




Or link



1 = active
0 = inactive





Min/Max link



1 = active
0 = inactive





And / S2 link (since Versions-No. 10)



1 = active
0 = inactive





Level control with external control



1 = active
0 = inactive




Level control



1 = active
0 = inactive





Single link



1 = active
0 = inactive



Return



Store and return to the main menu

A brief description of the individual links

And (AND) link of the two sensor inputs with blow-off of the outlet tracks.

Example:

Application: Two-track feeding system with back pressure control

Solution: Track 1 (Sensor 1) full = blow-off track 1 (Relais K1)

Track 2 still free

Track 2 (Sensor 2) full = blow-off track 2 (Relais K2)

Track 1 still free

Track 1 + Track 2 full = bowl feeder (chanal 1) stop blow-off air after approx. 4 sec

And (UND) link of the two sensor inputs without blow-off of the outlet track.

The bowl feeder (chanal 1) switches off, if both sensors are assigned. The air for sorting may be de-energized later (4 sec) through relay K2.

Or link of both sensor inputs.

The bowl feeder switches off (chanal1), if one of both sensors is assigned. The air for sorting may be de-energized later (4 sec) through relay K2.

Min/Max link of both sensor inputs.

The bowl feeder (chanal 1) switches off, if both sensors are assigned. Only when both sensors become free, the bowl feeder (chanal 1) switches on again. Relay K1 connects, with the switch off of the bowl feeder. Relay K2 connects 4 sec later (to switch off the blow-off air)

And / S2 link

The bowl feeder (chanal 1) switches off, when both sensors are assigned. When the sensor 2 is free, the system is switched on. The air for sorting can be switched off later (4sec) through relay K2.

Level control for the hopper with external control

Sensor 2 switches relay K1 according to the entered delay time (C005). When the sensor 1 is darkened, relay K1 releases (looking of the hopper).

Application: Sensor 1 = Staukontrolle; Sensor 2 = Füllstandskontrolle; Relay K1 = Ansteuerung Bunker

 **Level control**





Sensor 2 switches relay K1 according to the entered delay time (C005).

Application: Sensor 2 will be used as a level control (z.B. LC-N 24V DC). Relais K1 switches with a level controller: *Bowl feeder or linear feeder empty.*

4.5.5 Code C008 Cycle Control

Aim: Control sensors 1 (back pressure control) and/or 2.

The links "AND, SOL" must not be activated in code C006 when the cycle control system is activated.

Select code					Set code	
Code C008						
Sensor input 1 is monitored						
Sensor input 2 is monitored						
Monitoring dependent on channel 1						
Time until alarm signal						
Switch off channel 1						
Switch (Relay K1)						
Return						

 The cycle control system monitors the FREE sensor state. The time (A 180) is used to set the maximum time which a sensor may be free before an alarm signal is issued. Relay K1 is picked up when an alarm signal is issued. The fault is cleared by covering the sensor.

 If OUT = 1 and a fault occurs, the bowl feeder or linear feeder will also be switched off in addition to relay K1 (indicator lamp: fault) and an ERROR message will appear in the display. The fault is cleared with the cursor key at the bottom right. If OUT = 0 and a fault occurs, only relay K1 is energized (indicator lamp: fault). The fault is cleared automatically when sensor 1 is assigned.

 If A.I. = 1 Relay K1 is checked on breakdown (switch changed over from relay K2 to K1)

4.5.6 Code C009 Display Status

Aim: Checking the set vibration frequency and the sensor inputs.

Select code			Set code	
Code C009				
Remote control signal channel 1			I = active 0 = inactive	
Vibration frequency channel 1			I = 50 Hz 0 = 100 Hz	
Signal at sensor input 1			I = active 0 = inactive	
Signal at sensor input 2			I = active 0 = inactive	
Return			Store and return to main menu	

With the menu item HA = half-wave you can check whether the operating mode (100–50Hz) has been correctly selected.

4.5.7 Code C200 Blocking all Setting Functions

Aim: The user can no longer (accidentally) change the set values.(4.3 available)

Select code			Set code	
Code C200				
Block the setting functions			I = enabled 0 = block	
Return			Store and return to main menu	

Now only code C200 will be accepted!!!
It is possible to change the setpoint for channel 1 and 2 in the main menu (see 4.3)

4.5.8 Code C100 Output Preset with an External Voltage

Aim: Setpoint adjustment with external voltage

Select code			Select code	
Code C100				
External supply channel 1			I = active 0 = inactive	
Return			Store and return to main menu	

If the external supply is activated, the last set digital output value (%) will be the minimum output for 0 volt. The maximum output for 10 volts should be set with the parameter P in C001.

The external voltage supply should be connected to terminal 31, 32 and 33 in the control unit.
Terminal 31 = +10V
Terminal 32 = E
Terminal 33 = 0V

For more informations take a look at www.rna.de

4.5.9 Code C143 Store Parameters

Aim: Storing user parameters.


Select code




Select code




Code C143



Store



Return



Store and return to main menu

Once **PUSH** has been confirmed with **ENTER**, the selected parameters will be stored separately by pressing a cursor key.

4.5.10 Code C210 Reset Parameters

Aim: Resetting to factory settings or restoring the stored user parameters.


Select code



Set code



Code C210




Factory setting



User parameters



Return



Store and return to main menu

FAC Selection and confirmation of **FAC.** applies the factory settings.

US.PA. Selection and confirmation of **US.PA** restores the user parameters previously stored under **C143**.



D

Rhein-Nadel Automation GmbH

Reichsweg 19/23 • D - 52068 Aachen
Tel (+49) 0241/5109-159 • Fax (+49) 0241/5109-219
Internet www.rna.de • Email vertrieb@rna.de

Rhein-Nadel Automation GmbH

Zweigbetrieb Lüdenscheid
Nottebohmstraße 57 • D - 58511 Lüdenscheid
Tel (+49) 02351/41744 • Fax (+49) 02351/45582
Email werk.luedenscheid@rna.de

Rhein-Nadel Automation GmbH

Zweigbetrieb Ergolding
Ahornstraße 122 • D - 84030 Ergolding
Tel (+49) 0871/72812 • Fax (+49) 0871/77131
Email werk.ergolding@rna.de

PSA Zuführtechnik GmbH

Dr. Jakob-Berlinger-Weg 1 • D – 74523 Schwäbisch Hall
Tel +49 (0)791/9460098-0 • Fax +49 (0)791/9460098-29
Email info@psa-zt.de

CH

HSH Handling Systems AG

Wangenstr. 96 • CH - 3360 Herzogenbuchsee
Tel +(41) 062/95610-00 • Fax +(41) 062/95610-10
Internet www.rna.de • Email info@handling-systems.ch

GB

RNA AUTOMATION LTD

Unit C Castle Bromwich Business Park, Tameside Drive
Birmingham B35 7AG, United Kingdom
Tel +44 (0)121 749 2566 Fax +44 (0)121 749 6217
Web: www.rnaautomation.com
Email: sales@rnaautomation.com

E

Vibrant S.A.

Pol. Ind. Famades C/Energia Parc 27
E - 08940 Cornellà Llobregat (Barcelona)
Tel (+34) 093/377-7300 • Fax (+34) 093/377-6752
Internet www.vibrant-rna.com • Email info@vibrant-rna.com